




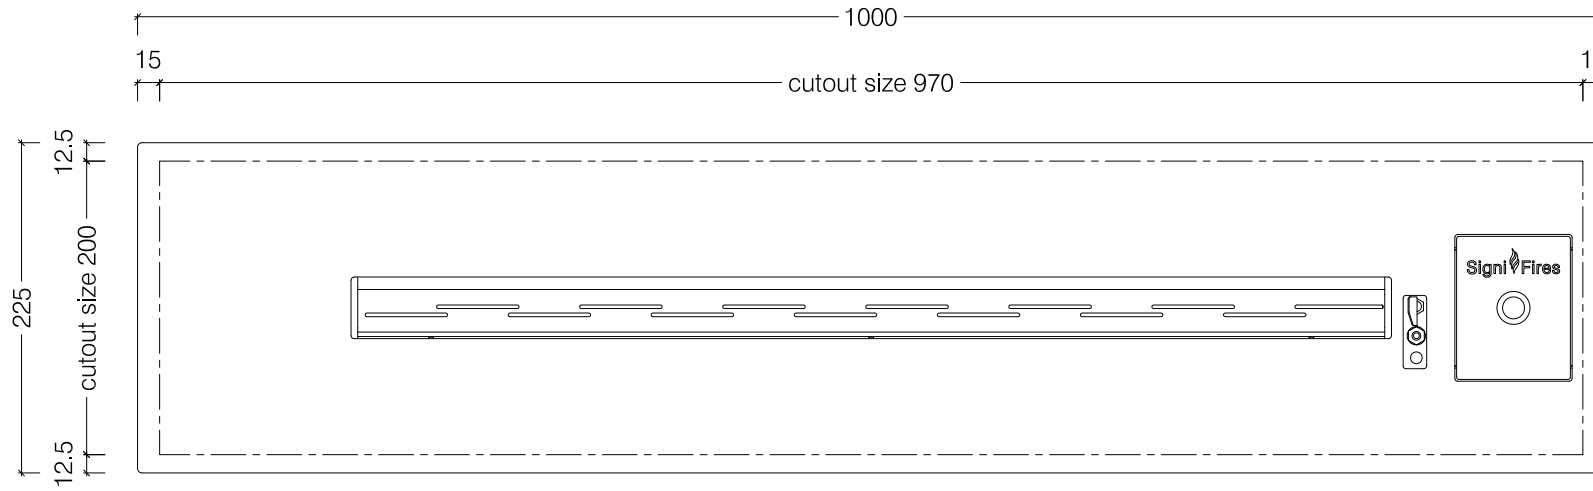

Top View

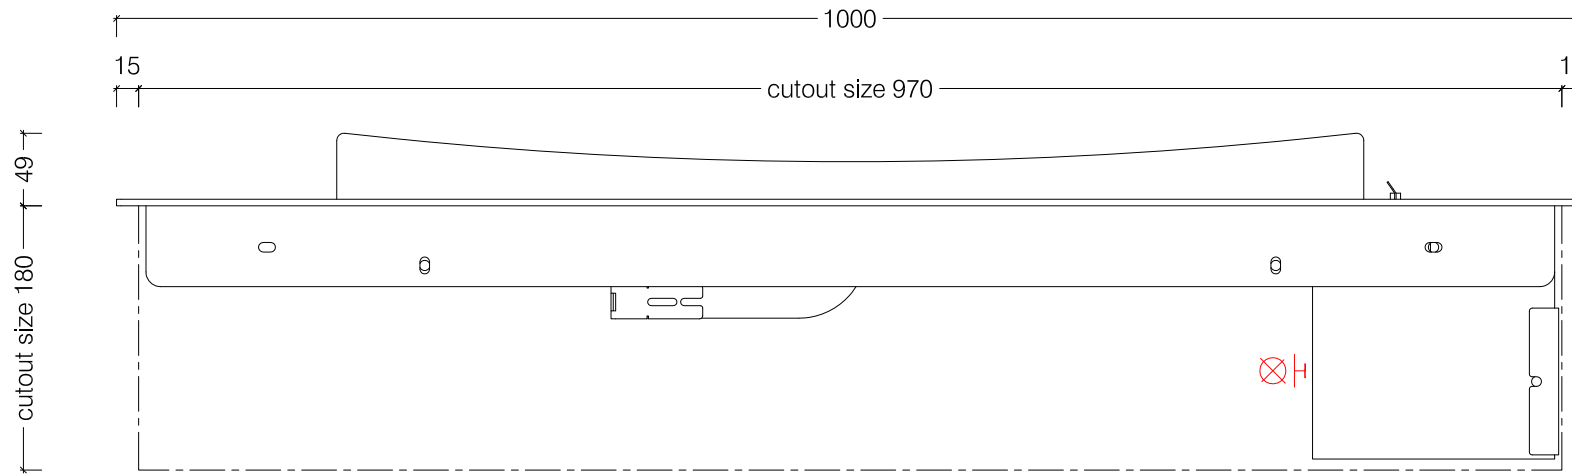


Front View

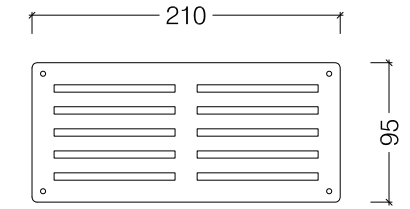

Vent Plate

NOTE: this fireplace requires oxygen from inside the room to function. Please ensure that you make adequate provision in your installation for this. We provide a vent plate with each fireplace.

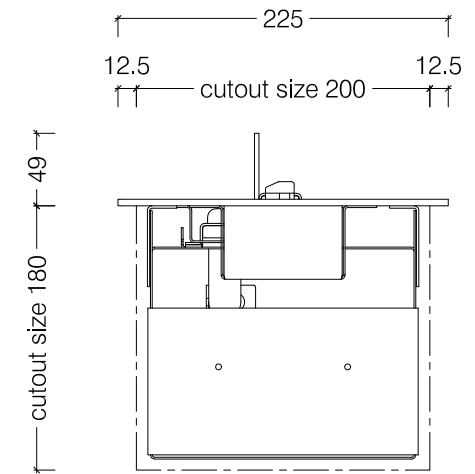

Side View



Gas supply line by specialist to right hand side of unit

1000 Drop In Gas Heater With Flame Trim