



Top View

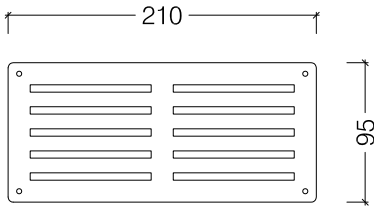


Vent Plate

NOTE: this fireplace requires oxygen from inside the room to function. Please ensure that you make adequate provision in your installation for this. We provide a vent plate with each fireplace.

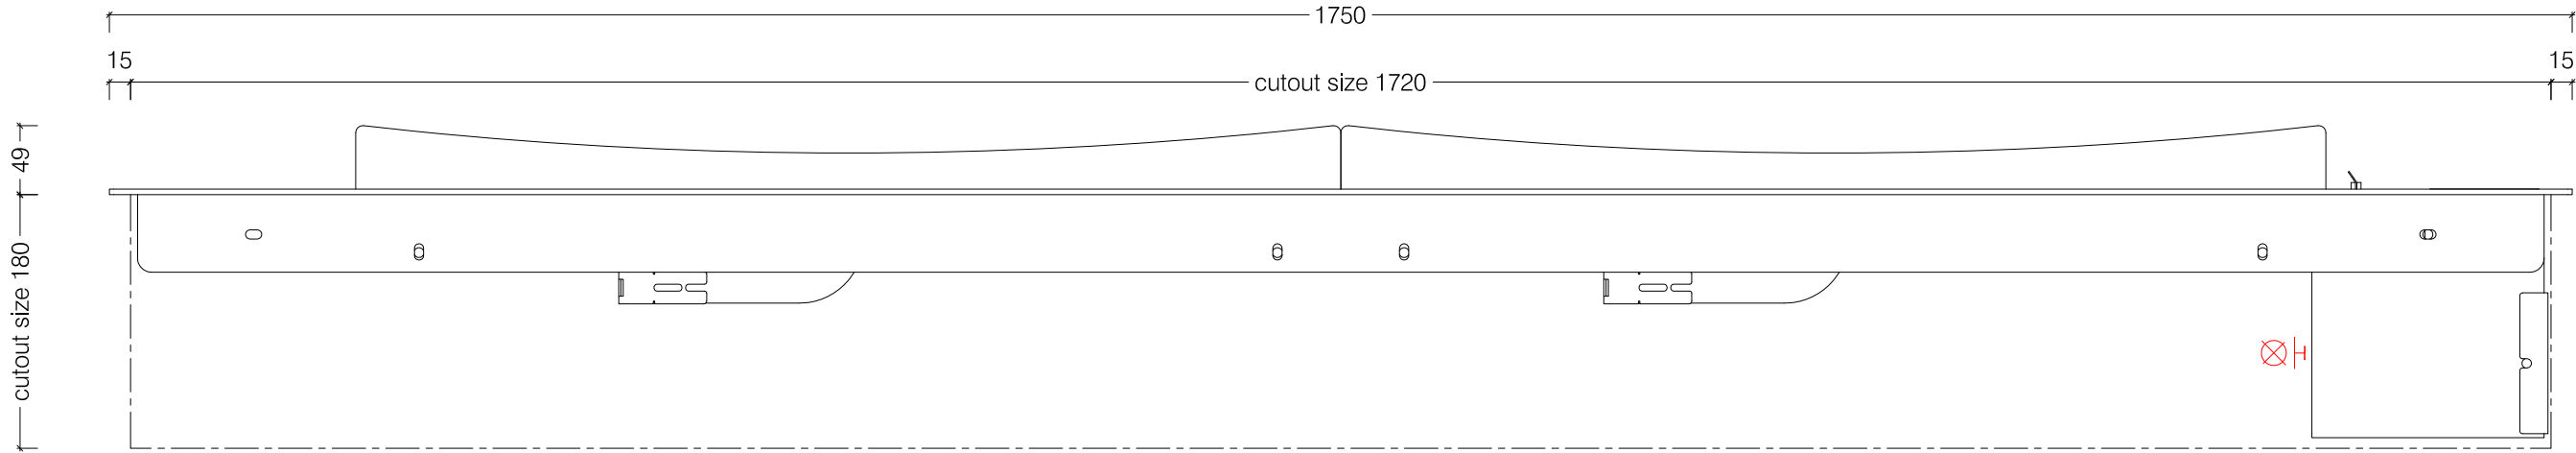

Front View

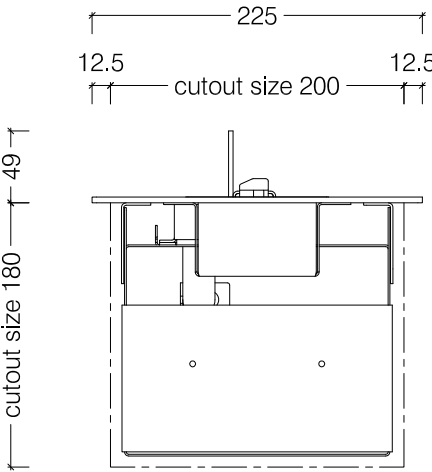

Side View

 Gas supply line by specialist to right hand side of unit

1750 Drop In Gas Heater With Flame Trim